
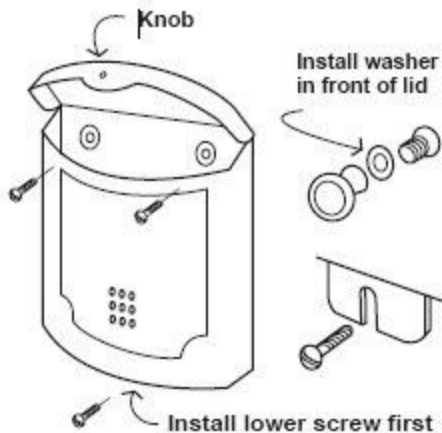


TOOLS NEEDED



INSTALLATION INSTRUCTIONS

Install mailbox in a sheltered area away from direct sun light and rain.

Remove the knob from back panel and install it in front of lid. There is only one provided.

Determine the location and height of where the mailbox is to be installed. Mark the location of the lower screw and install the lower screw first, **DO NOT** tighten all the way. Use plastic anchors when necessary.

Mount the mailbox onto the lower screw through the slotted hole. Level the mailbox and mark the upper holes. Install upper screws and tighten all three screws.

MAINTENANCE

The mailbox is lacquer coated, **DO NOT** use metal polish or abrasive material to clean the surface. Clean using soft cloth and mild detergent.

Apply a coat of car wax 2 to 3 times a year to protect the surface from fading or pitting due to exposure to UV rays, sun light or in coastal areas; salt residue accumulation from the air. This will prevent the lacquer coat from eroding