


vogue™ Classic Series - Crown Cap

Assembly Instructions

- 1 These instructions assume that you have already properly installed the vital™ Cluster Box Unit (CBU). If the CBU has not yet been installed, please refer to the instructions that came with the vital™ CBU.
- 2 Clean top, sides and back of CBU, to clear any surface dirt or debris with a soft damp cloth.
- 3 Using the supplied alcohol wipes, clean the indicated surfaces of the front and rear of the cluster box unit top surface.
- 4 Remove cover strips of the double-sided VHB permanent adhesive tape on the underside of the cap.
- 5 Align the cap over the CBU with the lower tape strip edge to the back of the CBU.
- 6 Press down firmly along the front edge and rear edge of the cap to ensure tape is secured.

Note:

Once cap is securely in place, the adhesive tape forms a permanent bond. Cap is very difficult to remove after placement and should be considered permanently installed.

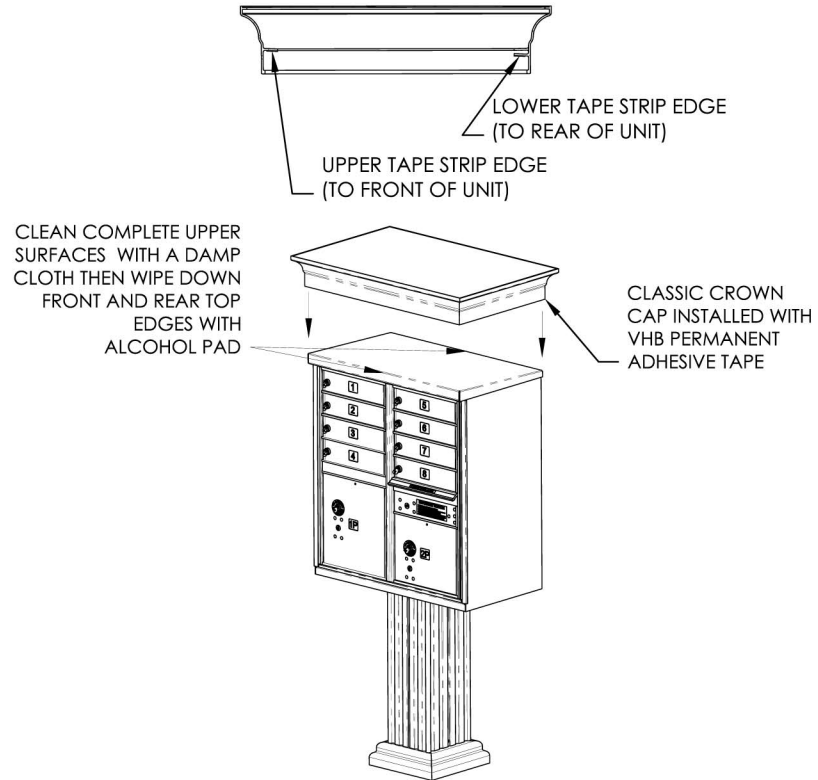

PRODUCT SERIES:

VOGUE™ CLASSIC SERIES - CROWN CAP

The Mailbox Works

800-824-9985
www.MailboxWorks.com

MODEL	CROWN	REV	-
SCALE	NONE	LAST REV. DATE	5/10/2010
DRAWING NUMBER	91550	DRAWN BY	AFD