

vogue™ Classic Series - Pillar Pedestal Cover


Assembly Instructions

1 These instructions assume that you have already properly installed the vital™ Cluster Box Unit (CBU). If the CBU has not yet been installed, please refer to the instructions that came with the vital™ CBU.


2 For all CBU Types:
Slide the pedestal base cover around the pedestal (pedestal cover base opening should be installed to the back of the CBU unit). Install pedestal base cover using #8 flat head self tapping screws.

3 Attach the pillar pedestal cover onto the CBU post as shown using four of the #10 pan head self tapping screws.

4 After the pillar pedestal cover is installed, slide cover plates over the top of the pedestal cover. Dimples found on cover plates should face up. Tabs on the cover plates should engage with the tops of pillar pedestal covers.

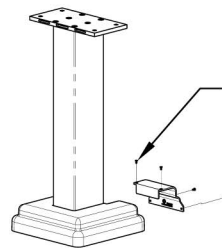

INSTALL PEDESTAL BASE COVER AROUND PEDESTAL STAND USING SELF TAPPING SCREWS

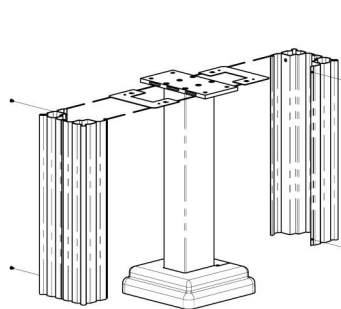

INSTALL PILLAR PEDESTAL COVER COLUMN AROUND PEDESTAL STAND USING SELF TAPPING SCREWS

CBU & PEDESTAL MUST BE ASSEMBLED & FULLY INSTALLED PRIOR TO ADDING ACCESSORIES


* CBU UNIT NOT SHOWN FOR CLARITY.

HARDWARE

 #8 FLAT HEAD SCREW (4)

 #10 PAN HEAD SCREW (4)

TOOLS



#2 PHILLIPS SCREW DRIVER
(NOT INCLUDED)

PRODUCT SERIES: VOGUE™ CLASSIC SERIES - PILLAR PEDESTAL COVER

The Mailbox Works	MODEL	PILL PED	REV	B
	SCALE	NONE	LAST REV DATE	1/27/2017
800-824-9985		DRAWING NUMBER	DRAWN BY	
www.MailboxWorks.com		91549	NBC	